



TENT INSTRUCTIONS

Step 1

Take your frame and slightly expand it to expose the corner bars.



Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.







Step 2

Take your canopy graphic and place it on top of the frame.



Step 5

Increase the height by extending the lower legs.



Step 8

The dome cap will push out the canopy, creating tension to flush out any loose areas.



Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of Hook and Loop sewn to it.



Step 6

Pull each leg down until the latch locks into place.



Step 9

The install is complete.







