



TENT INSTRUCTIONS

Step 1


Take your frame and slightly expand it to expose the corner bars.



Step 4

Step 7

With the canopy securely in position, expand the frame until the corner latches lock into place.

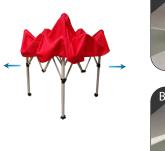

A



Step 2

Take your canopy graphic and place it on top of the frame.



Step 5

Increase the height by extending the lower legs.



Step 8

The dome cap will push out the canopy, creating tension to flush out any loose areas.



Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of Hook and Loop sewn to it.



Step 6

Pull each leg down until the latch locks into place.



Step 9

The install is complete.





Locate the spindle under the canopy, in the

middle of the frame. Pull the lever out and

rotate to extend the upper peak pole.





Step 10Use the velcro loops to attach the back wall to the tent legs.

